

FORSTHOFF Hand-Welder Heat Element Replacement Instructions

(If your welder is not heating)

Step 1

Unscrew screws around the barrel



Step 2

Remove barrel and green washer



Step 3

Remove Mica-Tube Insulator




Step 4

Pull-up to remove old heat element



Step 5

Carefully insert new heat element. Ensure that prongs are aligned correctly

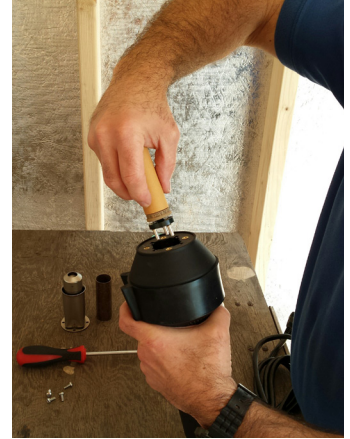

Step 6

Replace Mica-Tube Insulator



Step 7

Slide on green washer



Step 8

Replace barrel and screws

