

FORSTHOFF Hand-Welder Heat Element Replacement Instructions

(If your welder is not heating)

Step 1

Unscrew
screws around
the barrel



Step 2

Remove
barrel and
green washer



Step 3

Remove Mica-
Tube Insulator




Step 4

Pull-up to
remove old
heat element



Step 5

Carefully insert
new heat
element. Ensure
that prongs are
aligned
correctly

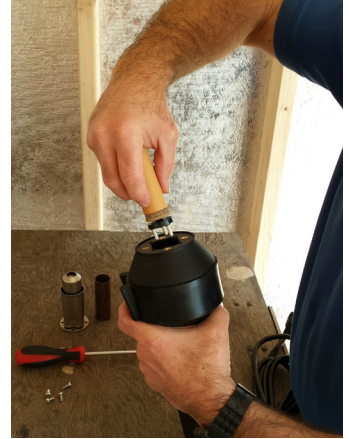

Step 6

Replace Mica-
Tube Insulator



Step 7

Slide on green
washer



Step 8

Replace barrel
and screws

